



A Division of Front End Digital Inc

11899 Stepping Stone Drive Fishers, IN 46038

1.800.586.0943

ProfiTouch Technical Article

2004-1003002

Title: Programming a Cherry Keyboard

Published: 10/03/2004

Symptoms: When you swipe a credit card it will not read it.

Cause: The Keyboard has lost the correct settings in order to work with ProfiTouch software.

Additional Information: To program the model of Cherry keyboard the following steps need to be performed:

1. To enter "programming" mode on the keyboard press and hold for 4 seconds the <CTRL>, <ALT> and <SHIFT> keys on both the left and right of the keyboard. You will hear two beeps. Then.....
2. To enable and set the header character for track 1: Press " V ", Press " 5 ", Press " % " and Press <ENTER> on the numpad section of the keyboard. Then, Press <SPACEBAR>. You will hear beeps with each key press. Pressing the spacebar is taking you out of programming mode.
3. Enter "programming" mode on the keyboard press and hold for 4 seconds the <CTRL>, <ALT> and <SHIFT> keys on both the left and right of the keyboard. You will hear two beeps. Then.....
4. For the Header of track 2 repeat Step 1 and then Press " V ", " 6 ", " ; ", <NUMPAD ENTER>, <SPACEBAR>
5. Enter "programming" mode on the keyboard press and hold for 4 seconds the <CTRL>, <ALT> and <SHIFT> keys on both the left and right of the keyboard. You will hear two beeps. Then.....
6. For the Trailer of track 1 repeat Step 1 and then Press " W ", " 5 ", " ? ", <NUMPAD ENTER>, <SPACEBAR>
7. Enter "programming" mode on the keyboard press and hold for 4 seconds the <CTRL>, <ALT> and <SHIFT> keys on both the left and right of the keyboard. You will hear two beeps. Then.....
8. For the Trailer of track 2 repeat Step 1 and then Press " W ", " 6 ", " ? ", <ALPHA ENTER>, <NUMPAD ENTER>, <SPACEBAR>

www.pyrimont.com It's possible. It's Pyrimont.